


Installation Instructions

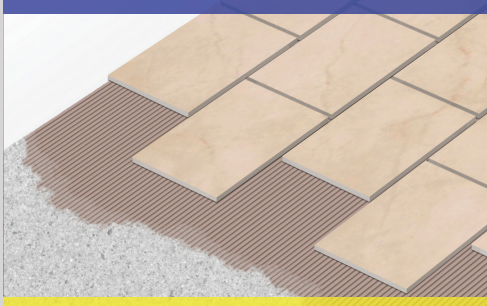

Install tiles in your preferred pattern. Complete grout application leaving grout lines clear as required. Use the Primer / Sealant on all porous tiles.



Micro Joint Kit comprising of Part 1 Base, Part 2 Hardener, Cartridge assembly and protective gloves. Use the protective gloves provided.




Pour Micro Joint Part 2 into Part 1 and mix thoroughly until a consistent colour is reached.



Carefully pour the mixture into a cartridge. Place end cap into cartridge and after carefully trimming the threaded end of the cartridge apply the nozzle and snip the end to suit the width of your grout line.



Using gentle pressure, carefully apply the Micro Joint material into the open grout line. (You may find it convenient to apply masking tape to the sides of the grout line if unsure of accuracy). Ensure the Micro Joint material is filled level to the surrounding grout level. Check and top up if the level drops.

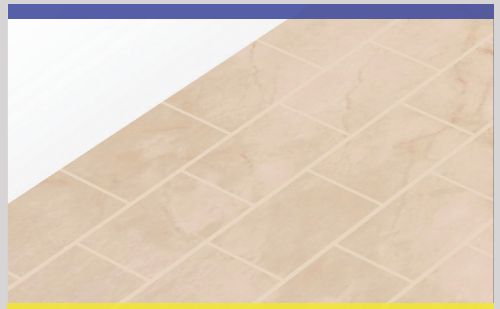

After application Micro Joint material will cure over a period of approximately 4 hours.

Surplus material can be carefully removed before fully curing with a cloth or paper towel dampened with acetone, (nail varnish remover).